



Cordless Stick Vacuum Cleaner

User Manual



VRT 50418 VW

EN - FR - TH



01M-8916563200-4923-01

Please read this guide first!

Dear Customer,

Thank you for choosing a Beko product. We would like you to achieve the optimal efficiency from this high quality product which has been manufactured with state of art technology. Please make sure you read and understand this guide and supplementary documentation fully before use and keep it as a reference. Include this guide with the unit if you hand it over to someone else. Observe all warnings and information herein and follow the instructions.

Symbols and their meanings

These symbols are used throughout this guide:

	Important information and useful hints about usage.
--	---

	WARNING: Warnings against dangerous situations concerning the security of life and property.
--	---

	Electric shock protection rating
--	----------------------------------



RECYCLED &
RECYCLABLE PAPER

CONTENTS

ENGLISH	03-16
FRANÇAIS	17-31
ภาษาไทย	32-50

1 Important safety and environmental instructions

This section contains safety instructions to prevent hazards that can result in injury or property damage.

Any warranty is void if these instructions are not followed.

1.1 General safety

- This appliance complies with international safety standards.
- This device can be used by children over 8 years of age, people with physical, sensory or mental challenges or people with lack of experience or knowledge; as long as control is ensured or information is provided regarding the hazards. Children must not play with the appliance. Cleaning and user maintenance shall not be carried out by unattended children.
- Do not use the appliance if the power cord or the appliance is damaged. Contact authorized service.
- Your mains power supply shall match the information shown on the rating plate label of the appliance.
- Do not use the appliance with an extension cord.
- To prevent damage to the power cord, prevent it from being pinched, crimped or rubbed against sharp edges.
- Do not touch the plug of the appliance with damp or wet hands while the appliance is plugged in.
- Do not pull on the cord while unplugging the appliance.
- Do not vacuum flammable materials and ensure that the cigarette ashes are cooled down before vacuuming them.
- Do not vacuum water and other fluids.
- Protect the appliance against precipitation, humidity and heat sources.
- Do not use the appliance in or near explosive or flammable environments and substances.
- Unplug the appliance before cleaning and maintenance.
- Do not immerse the appliance or its power cord in water for cleaning.

1 Important safety and environmental instructions

- Do not disassemble the appliance.
- Use only original parts or parts recommended by the manufacturer.
- To prevent blockage of the filter or damage to the motor, do not vacuum cement, plaster or fragments of compressed paper.
- Use the appliance with the adapter delivered with the appliance only.
- Do not use the appliance without filters, it may get damaged.
- If you keep the packaging materials, keep them out of the reach of children.
- This appliance is not intended to be used by persons, including children, with physical, sensory and mental disabilities or those who have not adequate experience and knowledge regarding its use, unless they are under the supervision of a person responsible for their safety or they are informed about the operation of the appliance.
- Children shall be supervised to prevent them from playing with the appliance.
- To avoid any risk of hazard, a damaged adaptor shall be replaced by the manufacturer, the authorized representative of the manufacturer or a similarly qualified technician.
- Keep your fingers, hair and loose clothes away from moving parts or clearances while vacuuming.
- Disconnect the appliance from power supply before removing the battery.
- Please discard used batteries in accordance with local laws and regulations.
- The batteries included in this appliance may only be replaced with qualified persons.
- Appliance is not intended to be operated for commercial purposes. This appliance is not designed for commercial use, it is intended for home use and in applications as follows:
 - In the staff kitchens of the stores, offices and other working environments

1 Important safety and environmental instructions

- In farm houses;
 - By customers in hotels, motels or other accommodation facilities
 - In hostels or similar environments.
- **WARNING:** Use the ZD012A220050EU removable supply unit delivered with the appliance to charge to the battery.
 - This appliance shall not be operated by children and people with limited physical, sensory and cognitive skills or people with lack of experience and knowledge unless they are under supervision or they are provided with the relevant instructions.
 - Children shall be supervised to prevent them from playing with the appliance.
 - Remove the depleted batteries from the appliance and dispose of these batteries in a safe way
 - The supply terminals are not to be short-circuited

1.2 Compliance with the WEEE Regulations and Waste Disposal



This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE). This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to official collection point for recycling of electrical and electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health.

1.3 Packaging information



Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

Information on Waste Batteries




This symbol on rechargeable batteries/batteries or on the packaging indicates that the rechargeable battery/battery may not be disposed of with regular household rubbish. For certain rechargeable batteries/batteries, this symbol may be supplemented by a chemical symbol. Symbols for mercury (Hg) or lead (Pb) are provided if the rechargeable batteries/batteries contain more than 0,0005 % mercury or more than 0,004 % lead.

Rechargeable batteries/batteries, including those which do not contain heavy metal, may not be disposed of with household waste. Always dispose of used batteries in accordance with local environmental regulations. Make enquiries about the applicable disposal regulations where you live.

1.5 What to do for energy saving

- When using your appliance, adjust the speed settings according to the surface, in order to save energy.
- Normally, lower speeds are used when cleaning hard surfaces, curtains and sofas, while high speeds are used in for cleaning carpets.

2 Overview

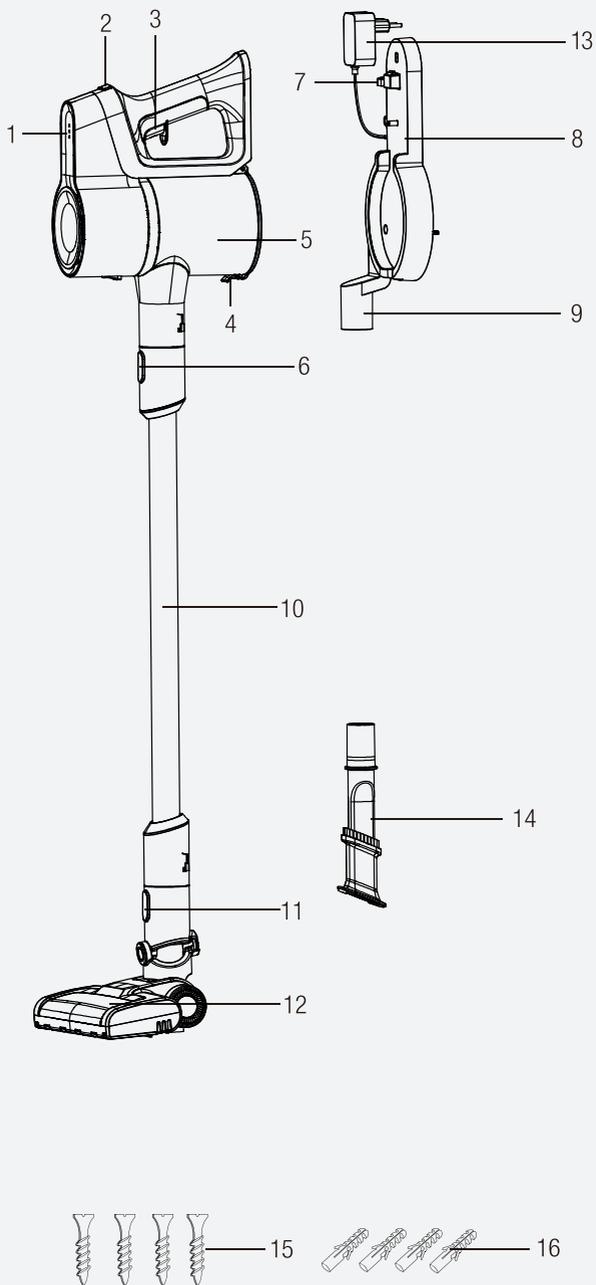

2 Overview

2.1 Controls and components

1. Charge indicator LED lights
2. Power Adjustment button
3. On/off button
4. Emptying dust container lid
5. Dust container
6. Tube release button
7. Appliance release button
8. Charging Dock
9. Accessory attachment parts
10. Tube
11. Brush release button
12. Electric turbo brush
13. Charging adaptor
14. 3in1 Accessories (Crevice too, Dust brush and Sofa brush)
15. Screw (4 pcs)
16. Dowel (4 pcs)

2.2 Technical data

Nominal input power	110 W
Input	100 - 240 V~ 50/60 Hz 0,5 A
Output	22 V  0.5 A
Charging time	4-5 hours
Runtime at max. power	20 mins
Runtime at min. power	42 mins

The rights to make technical and design changes are reserved.

The values provided with the appliance or its accompanying documents are laboratory readings in accordance with the respective standards. These values may differ depending on the use and ambient conditions.

2 Overview

External Power Supply Parameter


Manufacturer:	E-TEK Electronics Manufactory LTD
Model ID:	ZD012A220050EU
Input Voltage:	100-240V~
Input Frequency:	50/60Hz
Input Current:	0.5A
Output Voltage	22.0V
Output Current	0.5A
Output Power:	11 W
Average active efficiency:	86.57%
Efficiency at low load (10%):	85.04%
Power consumption under no load:	0.067W

3 Installation


3.1 Intended use

This appliance is intended for household use and it is not suitable for industrial use.


3.2 Installation of the charging dock

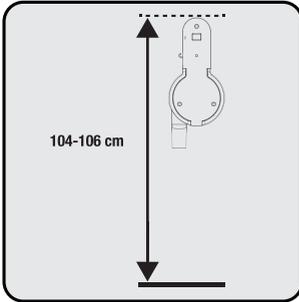

Position the charging dock (8) at a height of 104-106 cm from the ground.

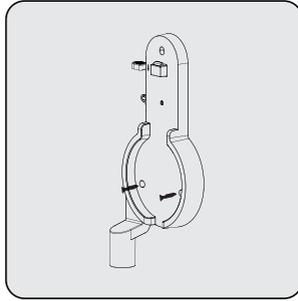


1- Fix four dowels (16) on the wall
2- Place four screws (15) into their locations on the charging dock (8) and mount on the dowels on the wall.

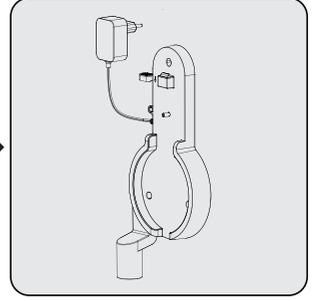


Plug the charging adaptor (13) to the socket.


3.3 Installation of the body and the brush

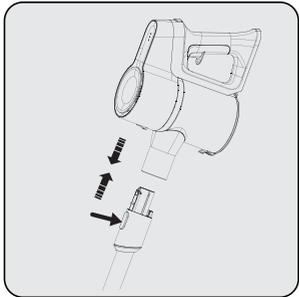

Push the tube (10) in the direction of arrow towards the body by pushing on the tube release button (6).

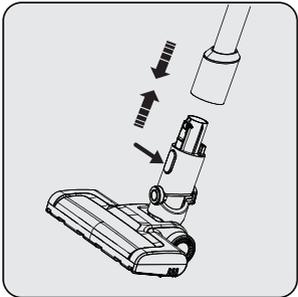


Press the electric turbo brush release button (11) on the electric turbo brush (12) and push it in the direction of arrow towards the tube.

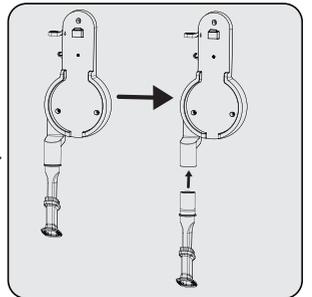


Attach crevice attachment (14) and dust brush to the charging dock (9).

4 Operation


4.1 Charging the appliance

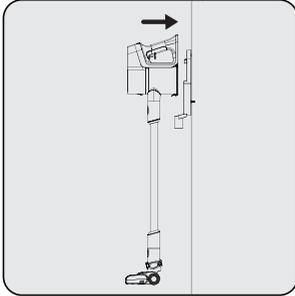

Place the appliance on the charging dock (8).
After placing dust container (5) on the charging dock (8), push the appliance towards the charging dock.

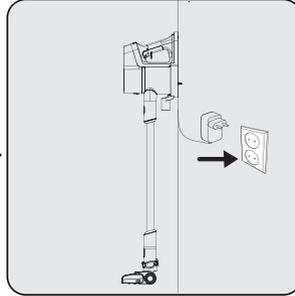

Plug the charging adaptor (13) to the socket.

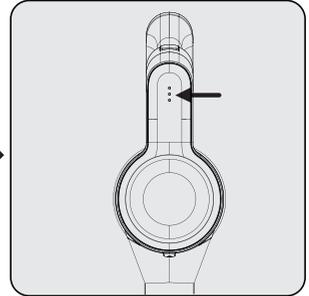

Flashing of the charge indicator LEDs (1) in white colour indicates that the appliance is being charged.
– When all levels of the charge indicator LEDs (1) are illuminated, this indicates that the charging of the appliance is completed.



It takes up to 4 to 5 hours to charge the appliance completely. The appliance shall not be operated while charging.




If the appliance is placed on the charging dock (8) while it is being operated, it shall be stopped automatically.



Pay attention to the power indicator LEDs (1) during charging. If only one indicator illuminates in red, then please kindly check whether the ON/OFF button or speed control button have any stuck or not. If the red indicator cannot be eliminated by button stuck, then please kindly contact with us for after sales service.

4 Operation

4.2 Usage

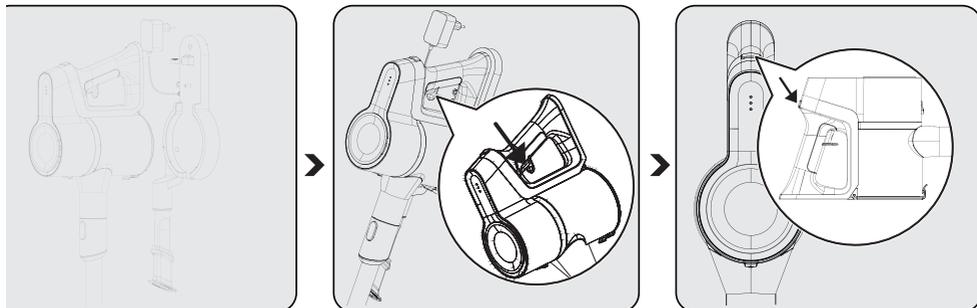


1- Push the appliance release button (7) on the charging dock (8) downward and pull the appliance towards yourself at the same time.
2- Remove the appliance from the charging dock (8).

Press the on/off button (3) to operate the appliance. The appliance starts operating with the minimum power when the on/off button is pressed.


To switch to the maximum power when operating in the minimum power, push the power adjustment button (2).
To switch to the minimum power when operating in the maximum power, push the power adjustment button (2) again.



The appliance may be placed for charging before the complete discharging of the battery. The appliance may be kept continuously as charging on the charging dock (8) until the next operation.

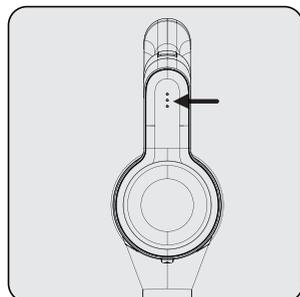


Pay attention to the power indicator LEDs (1) during operation. These indicators gradually turn off as the charge level is reduced, and when all indicators are turned off and only one indicator illuminates in red, then the charge of the appliance is about to run out. The appliance stops operating automatically after a short while when the red LED illuminates.

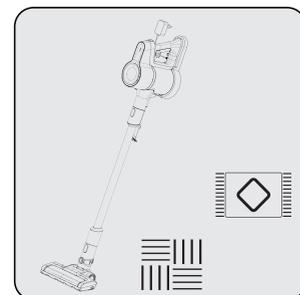

This appliance is suitable for use on carpets and hard floors.

4 Operation

4.3 Accessories

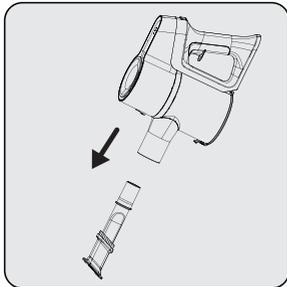

3in1 Accessories (14): Suitable for vacuuming the rear of the furnitures, hard to reach areas and narrow areas.

5 Cleaning and maintenance

Turn off and unplug the appliance before cleaning.



WARNING: Never use gasoline, solvent, abrasive cleaners, metal objects or hard brushes to clean the appliance.



WARNING: Deformation may occur on the filters within time as a result of usage. It shall be replaced with a new one to prevent loss of performance. Contact with the customer services to buy a new one.


5.1 Cleaning the Dust container and Filters




WARNING: Do not wash the filters.




We recommend you to clean the dustbin (5) after each operation.

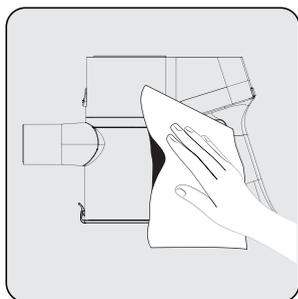

Wipe the surface of the body with a wet cloth.

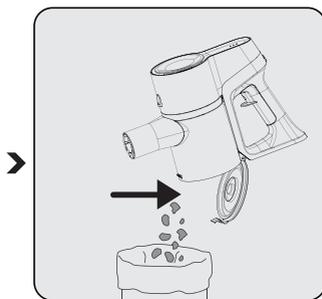


Open the lid (4) to empty dust in container

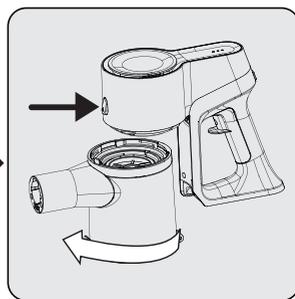


For a detailed cleaning of filters, remove the dust container by turning it clockwise.


5 Cleaning and maintenance

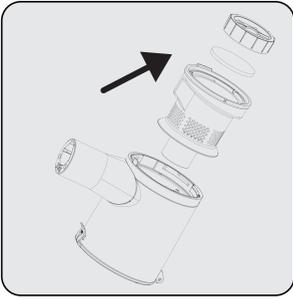


Pull EPA E10 and plastic filter holding ring from the EPA E10 handle.

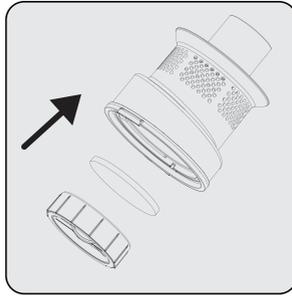


Separate EPA E10 and plastic filter from each other.

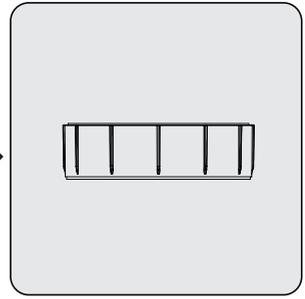


Remove the dust on the EPA E10 filter by tapping it on a hard surface such as a waste bin or by using a brush.

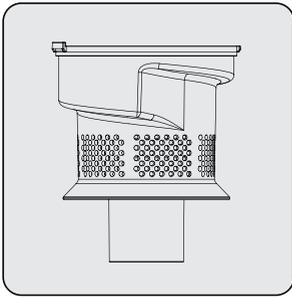

Attach EPA E10 filter to the plastic filter back.

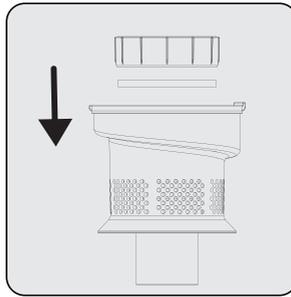

Attach plastic filter on the dustbin (5).

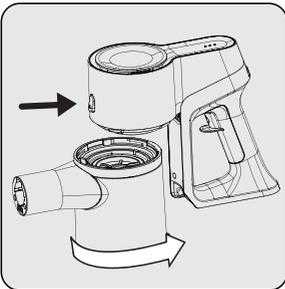


Fix the connector of dustbin to the holes on the body, then fix the dustbin by turning counter-clockwise until you hear the click sound.

5 Cleaning and maintenance


5.2 Cleaning of the brush




WARNING: Do not wash the turbo brush (12) and the main roller.

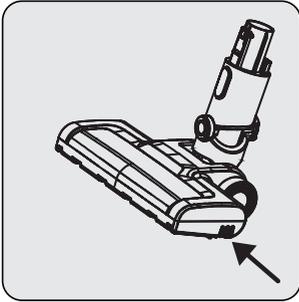

Press on the roller release button.

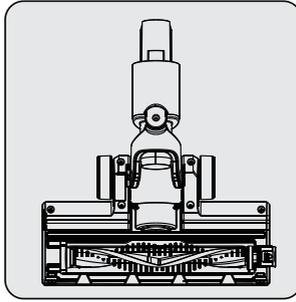

Remove the dust on it by tapping it lightly to a hard surface or remove the dust with a brush. If any hair, etc. is tangled, remove it by cutting it off.

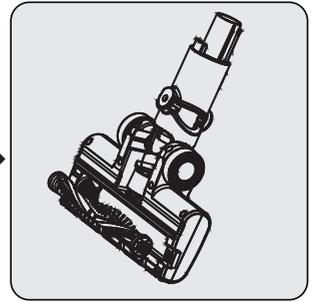

Fix the roller back to its place by pushing.

5.3 Storage

- If you do not intend to use the appliance for a long time, store it carefully.
- Unplug the appliance.
- Ensure that the appliance is kept out of reach of children.
- If you shall not be using the battery for a long period of time, please keep it in a cool and dry place at half charged condition. Do not charge or discharge completely.
- Store the battery on a non-conducting material, and do not allow the battery to contact metal directly. This shall damage the battery.

5.3 Transport and shipping

- During transport and shipping, carry the appliance with its original packaging. The packaging of the appliance will protect the appliance against physical damage.
- Do not put heavy objects on the appliance or its packaging. Otherwise the appliance may be damaged.
- If the appliance is dropped, the appliance may not operate or permanent damage may occur.